



EN - English

Instructions for installation and operation

Pressure dew point transmitter METPOINT® DPM

SD23



Dear customer,

Thank you for deciding in favour of the METPOINT® DPM SD23 pressure dew point transmitter. Please read these installation and operating instructions carefully before mounting and starting up the pressure dew point transmitter and follow our directions.

Perfect functioning of the pressure dew point transmitter can only be guaranteed when the provisions and notes stipulated here are strictly adhered to.

Contents

1	Pictograms and symbols	4
2	Signal words	4
3	General information	5
4	Safety instructions	6
5	Proper use	7
5.1	Exclusion from the field of application	7
6	Type plate	8
7	Technical data	9
8	Dimension drawings	12
9	Function	14
10	Installation	15
10.1	Installation instructions	15
10.2	Preparing the pressure dew point transmitter	16
10.3	Installation in the measuring chamber	16
11	Electrical installation	17
11.1	Connection DPM SD23, 4-wire system, 4 ... 20 mA	18
11.2	Connection DPM SD23, 4-wire system, 0 ... 10 V	19
11.3	Connection DPM SD23, bidirectional bus system RS485	20
12	Maintenance and calibration	22
12.1	Cleaning/decontamination	23
13	Scope of delivery	24
14	Accessories	25
15	Dismantling and disposal	26
16	Troubleshooting and fault removal	26
17	Declaration of conformity	27
18	Index	31

Pictograms and symbols

1 Pictograms and symbols



Observe the installation and operating instructions



General advice



Observe the installation and operating instructions
(on the type plate)



General danger symbol (danger, warning, caution)



Use protective gloves

2 Signal words

Danger!	Imminent hazard Consequences of non-observance: serious injury or death
Warning!	Potential hazard Consequences of non-observance: possible serious injury or death
Caution!	Imminent hazard Consequences of non-observance: possibly injury or property damage
Notice!	Potential hazard Consequences of non-observance: possibly injury or property damage
Important!	Additional advice, info, hints Consequences of non-observance: disadvantages during operation and maintenance, no danger

3 General information

**Warning!****Risk of injury when used incorrectly!**

Prior to the mounting, start-up, and operation of the pressure dew point transmitter, it must be ensured that the device was correctly chosen with regard to the measuring range, design and specific measurement conditions. In the event of non-observance, severe personal injury and/or damage to materials may occur.

**Warning!****Risk of injury in the event of insufficient qualifications!**

Improper use can lead to significant personal injury and material damage. All of the activities described in these operating instructions must only be carried out by qualified personnel with the qualifications described hereinafter.

Qualified personnel

Due to the specific training and knowledge concerning the measuring and control technology, and due to their experience and knowledge of the country-specific provisions, standards in force and directives, qualified personnel are capable of carrying out the described work and of independently identifying the possible risks.

Special employment conditions require further corresponding knowledge, e.g. regarding aggressive media.



Please check, prior to reading the operating instructions, whether or not these instructions correspond to the device. Read these installation and operating instructions carefully prior to any intervention regarding the METPOINT® DPM. The operating instructions must be accessible at all times at the place of application of the device.

If you have any queries regarding these instructions, please contact BEKO TECHNOLOGIES GMBH.

Installation works must exclusively be carried out by authorised and qualified personnel. Prior to undertaking any measures, the qualified personnel shall read up on the device by carefully studying the operating instructions. The operator of the products is responsible for the adherence to these provisions. The respective directives in force apply to the qualification and expertise of the qualified personnel.

For safe operation, the device must only be installed and operated in accordance with the indications in the operating instructions. In addition, the national and operational statutory provisions and safety regulations, as well as the accident prevention regulations required for the respective case of application, need to be observed during employment. This applies accordingly when accessories are used.

**Important:**

Keep all the packaging materials of the pressure dew point transmitter, since these will be required for the further installation and return.

Safety instructions

4 Safety instructions



Danger!
Compressed air!

Risk of serious injury or death through contact with quickly or suddenly escaping compressed air or through bursting plant components.

Measures

- Do not exceed the max. operating pressure (see type plate)!
- Only use pressure-resistant installation material!
- Make sure that no persons or objects can be hit by emerging compressed air!



Danger!
Inadmissible operating parameters!

Under-running or exceeding the limit values involves risks for persons and the material, and malfunction and service failures may occur.

Measures

- Make sure that the pressure dew point transmitter is operated only within the permissible limit values that are indicated on the type plate and in the technical data.
- Exact compliance with the performance data of the pressure dew point transmitter in connection with the case of application.
- Carry out service and calibration measures at regular intervals.

Further safety advice

- During installation and operation, the national regulations and safety instructions in force also need to be observed.
- The pressure dew point transmitter must not be employed in hazardous areas.

Additional instructions

- Do not overheat the device!
- The pressure dew point transmitter must not be disassembled!



Caution!
Damage possible!

Using the pressure dew point transmitter with corrosive media involves the risk of premature mechanical failure.

Measures

- Only use the device with the media that are listed in the data sheet and in the technical data.



Note:

The resistance at the 1.5 times permissible max. operating pressure is confirmed.
For further information, please refer to the enclosed technical data sheet.

5 Proper use

The **METPOINT® DPM** pressure dew point transmitter is intended for the measurement of the pressure dew point in **gaseous** media. The pressure dew point transmitter transforms the measured value into a linear, analogue output signal (4 ... 20 mA or 0... 10 V) or into a digital output signal RS485.

The application is restricted to compressed air and inert gases of fluid group 2 in accordance with the 2014/68/EC Pressure Equipment Directive.

The max. permissible operating pressure is 50 bar (g) and the temperature of the process medium must not exceed the range between -30 and +70 °C.

The **METPOINT® DPM** pressure dew point transmitter is exclusively designed and constructed for the proper application purpose that is described herein and must be used correspondingly.

A check in order to ascertain whether or not the device is suitable for the chosen employment must be carried out by the user. It must be ensured that the medium is compatible with the components which come into contact with it. **The technical data listed in the data sheet are binding.**

Improper handling or operation outside the technical specifications is impermissible. **Claims of any kind on the basis of improper use are excluded.**


5.1 Exclusion from the field of application

- The device is **not** suitable for use in hazardous areas.
- The device is **not** suitable for application with corrosive gases.
- Improper handling or operation outside the technical specifications.

Type plate

6 Type plate

The type plate is on the housing. It includes all the important data regarding the METPOINT® DPM pressure dew point transmitter which must be communicated to the manufacturer or supplier upon request.

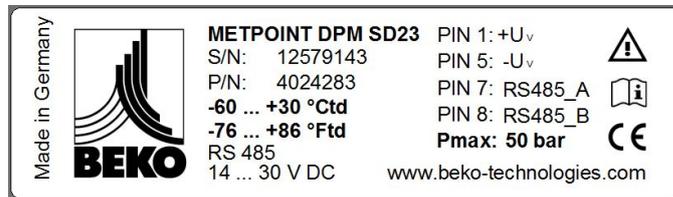

METPOINT® DPM SD23	Product designation
S/N:	Serial number
P/N:	Item number
-60 ... +30 °C_{td}	Measuring range
-76 ... +86 °F_{td}	
RS485	Output signal
14 ... 30 V DC	Power supply
PIN 1:	Power supply (+U _v)
PIN 5:	Power supply (-U _v)
PIN 7:	Signal output (RS458_A)
PIN 8:	Signal output (RS458_B)
Pmax:	50 bar



Note:

Never remove, damage, or obliterate the type plate!

7 Technical data

	
General indications	
Model designation	DPM SD23
Measuring principle	Capacitive polymer sensor
Measured parameter	°C t _d , dew point/freezing point
Measuring range	-60 ... +30 °C_{td} (-76 ... +86 °F_{td})
Output signal	4 ... 20 mA , analogue, 4-wire
Output signal	0 ... 10 V , analogue, 4-wire
Output signal	RS485 , digital output, 4-wire
Max. permissible operating overpressure	50 bar(g)
Process medium ¹	Compressed air
Temperature-compensated range	-25 ... +60°C
Reference conditions ^{2,3}	EN 61298-1
Process connection	G 1/2 external thread (ISO 228-1)
Sensor protection	Stainless steel sintered filter 40 µm
Measuring gas flow when the measuring chamber is employed	1 ... 3 standard litres/min.
Weight	175 g
Protection class according to EN 60529 ⁴	IP 65

¹ **Process medium**

Compressed air, nitrogen, and other gases of group 2 according to Article 13, Clause 1b of the PED 2014/68/EC. Group 2 comprises fluids which are **not** toxic, corrosive, flammable, potentially explosive, and fire-promoting.

The process medium must be compatible with the material 1.4404 and the other materials which come into contact with the medium (see Table: materials).

² **The tests are carried out under ambient conditions in accordance with EN 61298-1.**

Temperature: 15 ... 25 °C
 Air pressure: 860 ... 1060 mbar
 Air humidity: 45 ... 75% relative

The max. permissible deviation of the ambient temperature must not exceed 1°C in 10 min. for each test, and maximally 3°C/hour.

³ The max. error of measurement refers to the calibration of the pressure dew point transmitters with the medium compressed air under the following reference conditions:

Compressed-air temperature: +20°C
 Operating pressure: 5.0 bar(abs.)

⁴ The indicated protection classes according to EN 60529 only apply when connected, with a mating connector with a corresponding protection class.

Technical data

Materials	
Sensor element (in contact with the medium)	Polymer, aluminium oxide, Ni, Cr, Au, Ag, Cu, Pt, Sn
Glass feedthrough (in contact with the medium)	1.4301, 2.4478 (NiFe), Au, FKM/EPDM
Process connection (in contact with the medium)	1.4404, EN 10272, EN 10088-3
Housing	1.4404, EN 10272, EN 10088-3
Mounting connector (Phoenix, item no. 1557581)	CuZn, Au, PA 66, FKM / EPDM

Permissible temperature ranges	
Process-medium temperature	-30°C ... +70 °C
Ambient temperature during operation	-25°C ... +60 °C
Storage and transport temperature	-40°C ... +85 °C
Ambient humidity	0...95 %, non-condensing

Accuracy	
Max. error of measurement ¹	± 4 K for -60 ... -50°C t _d ± 3 K for -50 ... -30°C t _d ± 2 K for -30 ... -10°C t _d ± 1 K for -10 ... +30°C t _d
Response time	< 10 sec. from dry to wet < 40 sec. from wet to dry
Measuring rate	0.5 Hz = 2 measurements per second

CE conformity	
Pressure Equipment Directive ²	2014/68/EC
EMC Directive	2014/30/EU
EMC immunity to interference, industrial field	EN 61326-1 & EN 61326-2-3
EMC emitted interference (emission), group 1, class B	EN 61326-1
CE labelling according to the EMC Directive 2014/30/EU	

¹ Max. error of measurement at reference conditions.

² For gases and fluids of fluid group 2, the requirements according to Article 4, Clause 3 (good engineering practice) are met.

Electrical connections	
Connector (cable box) according to EN 61076-2-101	M12 x1 (4-pole)
Type of connection	Screw terminals
Wire cross-section	Max. 0.50 mm ² (AWG 20)
Grommet	6 ... 8 mm
Protection class	IP 67 according to EN60529

Electrical specifications DPM SD23		
Supply voltage ¹ U_V		14 ... 30 V DC
Max. power consumption during nominal operation	DPM SD23 (4 ... 20 mA)	1200 mW
	DPM SD23 (0 ... 10 V)	600 mW
	DPM SD23 (RS485)	600 mW
Current consumption ² during nominal operation	DPM SD23 (4 ... 20 mA)	max. 50 mA
	DPM SD23 (0 ... 10 V)	25 mA
	DPM SD23 (RS485)	25 mA
Load (load resistance) R_L	DPM SD23 (4 ... 20 mA)	$R_L = \text{max. } 416 \Omega \text{ at } 24 \text{ V DC}$
	DPM SD23 (0 ... 10 V)	$R_L \geq 10 \text{ k}\Omega$
Resistance to short-circuiting		Permanent
Reverse voltage protection ³		Available
Insulation resistance, EN 61298-2, Clause 6.3.2		> 100 M Ω at 500V DC
Voltage proof, EN 61298-2, Clause 6.3.3		500 V AC
Overvoltage arrester ⁴		33 V DC

¹ **The nominal value of the supply voltage is 24 V DC.**

Supply to the pressure dew point transmitter should be implemented with a stabilised, short-circuit-protected power supply that is protected against overvoltage.

The energy supply to the pressure dew point transmitter must come from a source with an **energy-limited electrical circuit** (10A max./ 30V max.) and a protective separation from the network. **See EN 61010-1, Clause 9.4.**

² The protection against excess current is realised via a resettable PTC fuse.

³ Reverse voltage protection.


In the event that the connections are interchanged, the transmitter may be damaged under certain circumstances. It is imperative to observe the connection diagrams.

⁴ Overvoltage arrester. The overvoltage is limited at 33 V DC by the suppressor diode.


Dimension drawings

8 Dimension drawings


Dimensions DPM SD23

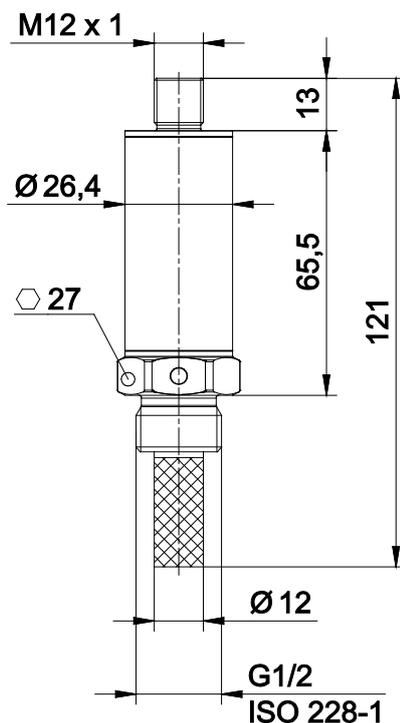

Dimensions DPM SD 23 with a connecting plug (straight)

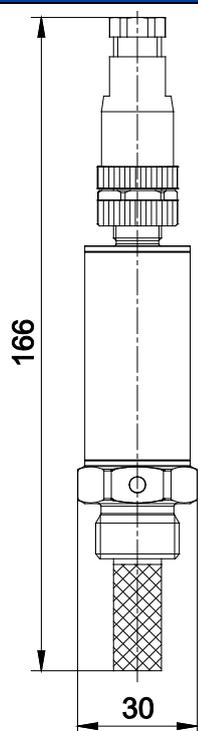


Dimensions DPM SD23 with a connecting plug (angle)

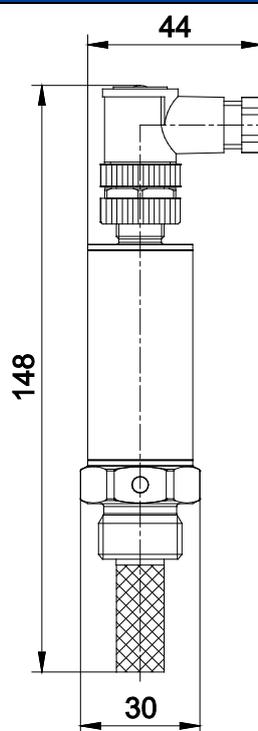


Standards for threads

Straight pipe thread (internal and external screw thread) for a non-sealing connection in the thread
Short symbol **G**, according to **ISO 228-1**


Dimensions measuring chamber

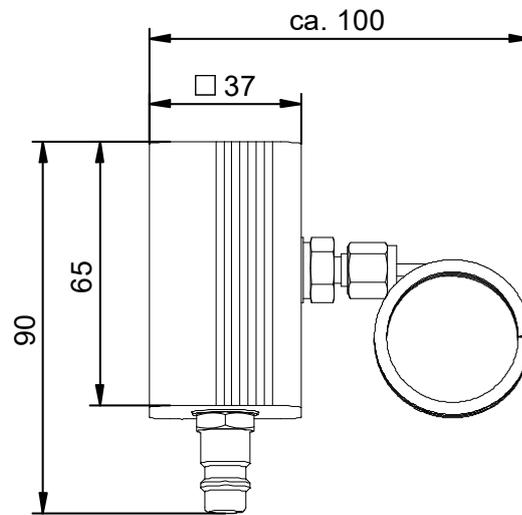

Dimensions measuring chamber with a purge-air controller

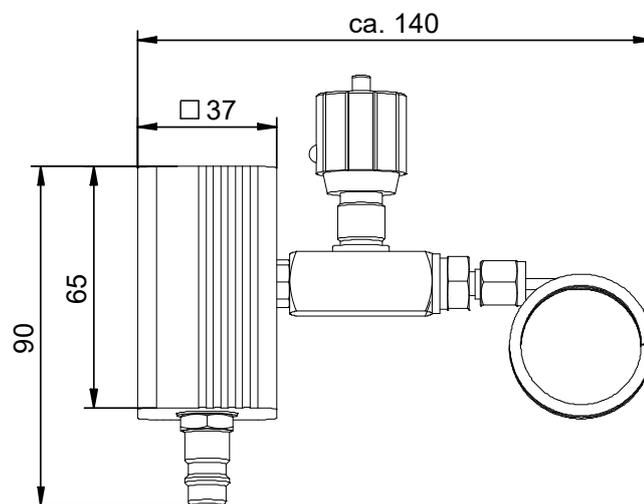

9 Function

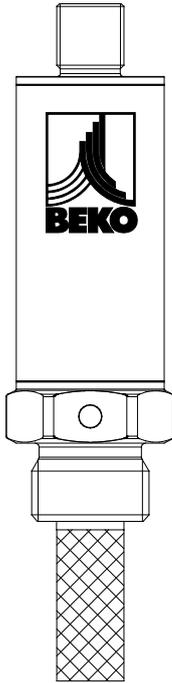

The **METPOINT® DPM SD23** pressure dew point transmitter includes all of the industrially common output signals in one model:

- A configurable voltage output 0...10 V
- A configurable power output 4 ... 20 mA
- A digital RS 485 interface with MODBUS protocol or BCP = BEKO Communication Protocol

At the analogue 4...20 mA output and at the digital RS485 interface, the measuring range exceedances and fault signals are provided. The transmitter can be updated via the digital interface, so that the product up-to-dateness is ensured at all times.

The transmitter is equipped with a G ½" fixing thread according to ISO 228-1 and can directly be screwed into the measuring chamber. Alternatively, direct installation in the measuring line is also possible.

During the production of the **METPOINT® DPM SD23**, calibration is implemented at 20 measuring points. The employed reference devices are traceable to the national norms of the Physikalisch-Technische Bundesanstalt (national metrology institute).

10 Installation

10.1 Installation instructions



Warning!

Risk of injury in the event of insufficient qualifications!

Improper use can lead to significant personal injury and material damage. All of the activities described in these operating instructions must only be carried out by qualified personnel with the qualifications described hereinafter.

Qualified personnel

Due to the specific training and knowledge concerning the measuring and control technology, and due to their experience and knowledge of the country-specific provisions, standards in force and directives, qualified personnel are capable of carrying out the described work and of independently identifying the possible risks.

Special employment conditions require further corresponding knowledge, e.g. regarding aggressive media.



Danger!

Compressed air!

Risk of serious injury or death through contact with quickly or suddenly escaping compressed air or through bursting and/or unsecured plant components.

Measures:

- **Only carry out installation works when the system is pressureless.**
- Only use pressure-resistant installation material.
- Do not exceed the max. operating pressure (see type plate).
- Check the installation point for tightness subsequent to installation.



Warning!

Risk of injury through temperature!



Risk of injury through the contact with very high or low temperatures.

Measures:

- Prior to installation or removal of the pressure dew point transmitter, carry out a temperature compensation or wear protective gloves.



Caution!

Malfunction at the pressure dew point transmitter!

Through incorrect installation, malfunctions may occur at the METPOINT® DPM SD23 pressure dew point transmitter. These can lead to incorrect measuring results and to misinterpretations.



Note:

It is imperative to observe all of the listed hazard and warning notes.

Please also observe all the provisions and instructions regarding the occupational safety and fire at the respective point of installation.

As a matter of principle, only use suitable tools and material in a proper condition.


Bear in mind that condensates can contain aggressive and harmful components. Therefore, avoid contact with the skin.

Installation

10.2 Preparing the pressure dew point transmitter


The **METPOINT® DPM SD23** pressure dew point transmitter is delivered by the factory in a protection chamber. The latter protects the transmitter against damage and high humidity.

1. Unscrew the pressure dew point transmitter (3) in the anti-clockwise direction from the protection chamber.
2. Protect the sealing ring (2) against loss when unscrewing the transmitter and keep it ready for the installation in the measuring chamber.
3. The protection chamber (1) and the contained desiccant must be kept for the return transport of the transmitter.

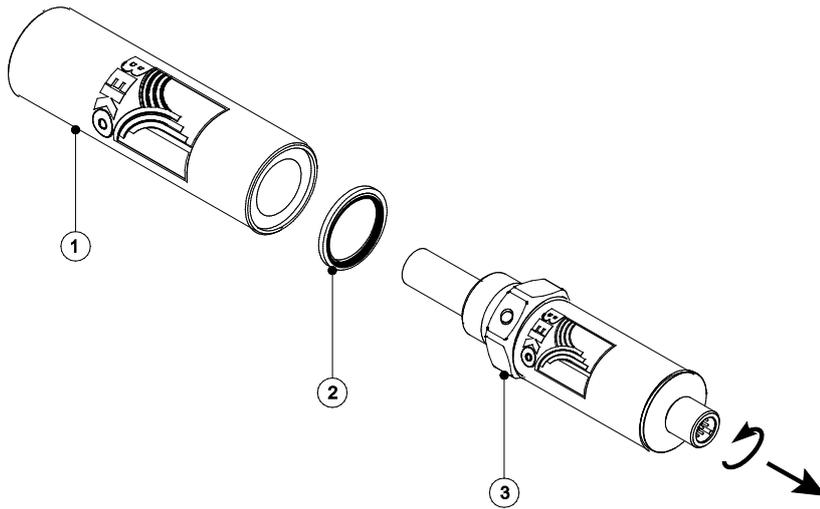

10.3 Installation in the measuring chamber

Firmly screw the pressure dew point transmitter (3) with the sealing ring (2) into the measuring chamber (4) or (5), and then check for tightness.

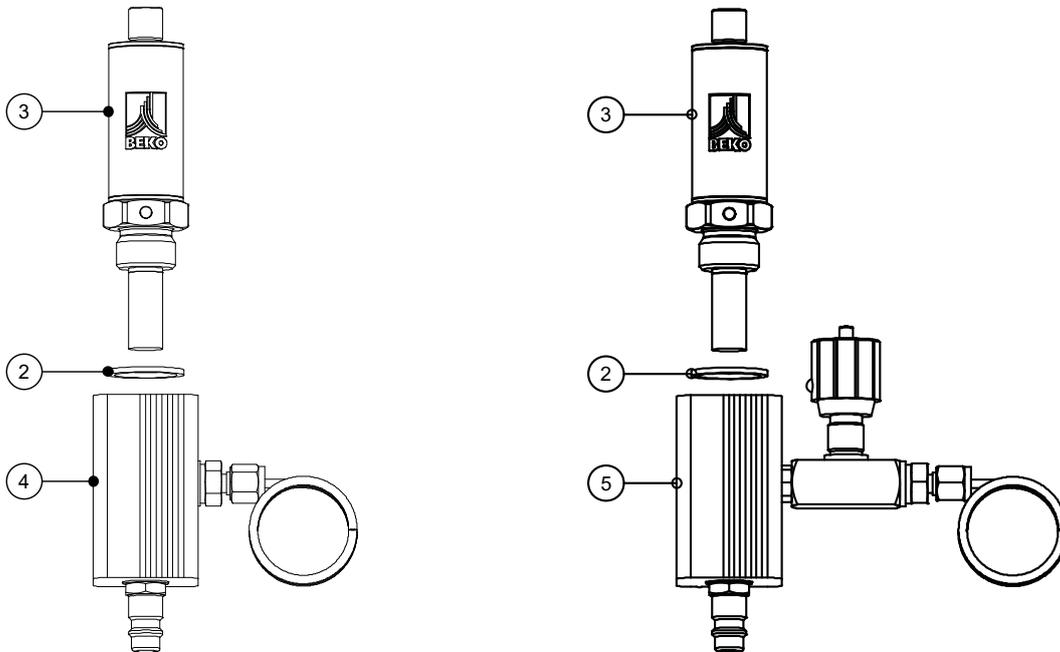

Note:

The max. permissible operating pressure and the operating temperature of the measuring chamber can be taken from the type plate of the respective measuring chamber.

11 Electrical installation

The nominal value for the supply voltage for the electrical installation is 24 V DC.

Supply of the METPOINT® DPM SD23 must be implemented with a stabilised, short-circuit-protected power supply that is protected against overvoltage. The energy supply must come from a source with an energy-limited electrical circuit (10 A max./ 30 V max.) and a protective separation from the network. **See also EN 61010-1, Clause 9.4.**

Prior to the installation and start-up, the maximum load resistance must be observed. With a nominal value of the supply voltage of **24 V DC**, the max. load resistance is 571 Ω. With a supply voltage that deviates from 24 V DC, the max. load resistance can be calculated according to the following formula:

$$R_L \leq (U_v - 14 \text{ V}) / 0.024 \text{ A } [\Omega]$$



Warning!

Risk of injury in the event of insufficient qualifications!

Improper use can lead to significant personal injury and material damage. All of the activities described in these operating instructions must only be carried out by qualified personnel with the qualifications described hereinafter.

Qualified personnel


Due to the specific training and knowledge concerning the measuring and control technology, and due to their experience and knowledge of the country-specific provisions, standards in force, and directives, qualified personnel are capable of carrying out the described work and of independently identifying the possible risks.

Special employment conditions require further corresponding knowledge, e.g. regarding aggressive media.

Connector, M12 x 1, 8-pole, a-coded		
Arrangement of the poles plug View transmitter side	Arrangement of the poles - female connector View female connector side	Arrangement of the poles female connector View screwing side

The cable must be assembled as follows:

1. Push the components of the plug connector over the cable
2. Cut the cable jacket by 20 mm in length
3. Cut the conductor sheath by 5 mm in length
4. Introduce the cable into the connector according to the pin assignment
5. Assemble/screw together the components of the connector

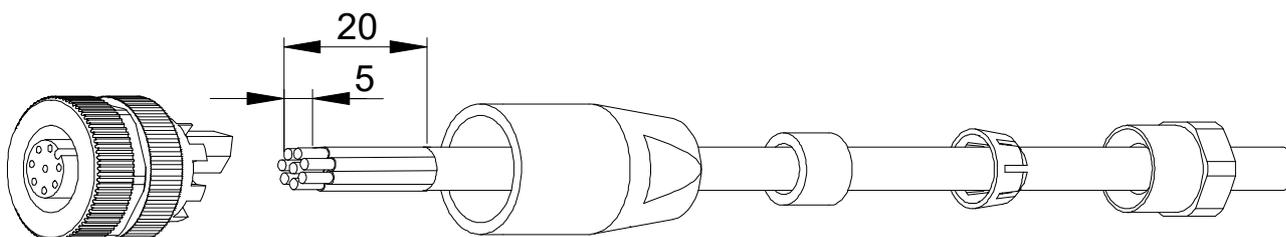


Electrical installation

11.1 Connection DPM SD23, 4-wire system, 4 ... 20 mA

Pin	Function	Description	Conductor colouring
PIN-1	+U _V	Positive (+) connection of the supply voltage	Brown
PIN-4	+I _{OUT}	Current output	White
PIN-6	GND	Analogue reference potential	Black
PIN-5	-U _V	Negative (-) connection of the supply voltage	Blue

Connection diagram DPM SD 23, 4-wire system, current output 4 ... 20 mA

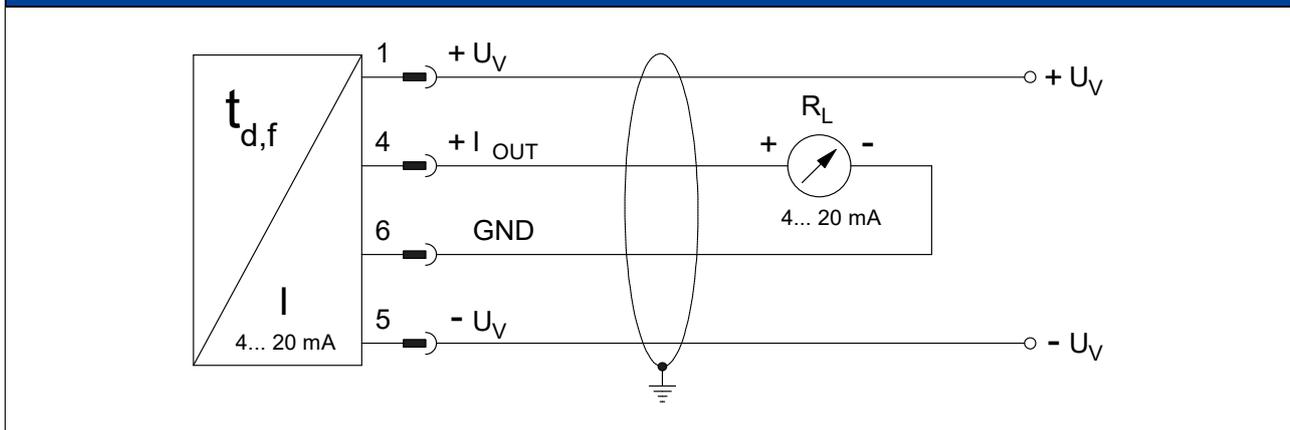

Notes:

The analogue current output 4 ... 20 mA has no potential isolation to the power supply.

The **METPOINT® DPM SD23** pressure dew point transmitters are supplied ex works with the current output 4 ... 20 mA. The following scaling was configured in the factory:

4 mA = - 60 °C_{td} (-76 °F_{td})

20 mA = + 30 °C_{td} (+86 °F_{td})


The output of the current signal takes place at PIN-4 of the 8-pole M12 connector. The signal output is implemented as an **active power source** against the analogue reference potential (PIN-6).

For the connection to superordinate control systems, an isolation amplifier may be required in order to avoid earth-coupling. In this respect, please contact the manufacturer of the superordinate control system regarding the possible specifications.

It is recommended to use a shielded cable for the installation. Shielding is implemented via the shield ring of the connector. The preconditions are that the respective connector is made of metal and that the shield has the shape of a braid. The shielding should be earthed at one end.

11.2 Connection DPM SD23, 4-wire system, 0 ... 10 V

Pin	Function	Description	Conductor colouring
PIN-1	+U _V	Positive (+) connection of the supply voltage	Brown
PIN-2	+ U _{OUT}	Positive (+) connection of the measuring signal	White
PIN-3	GND	Analogue reference potential	Black
PIN-5	- U _V	Negative (-) connection of the supply voltage	Blue

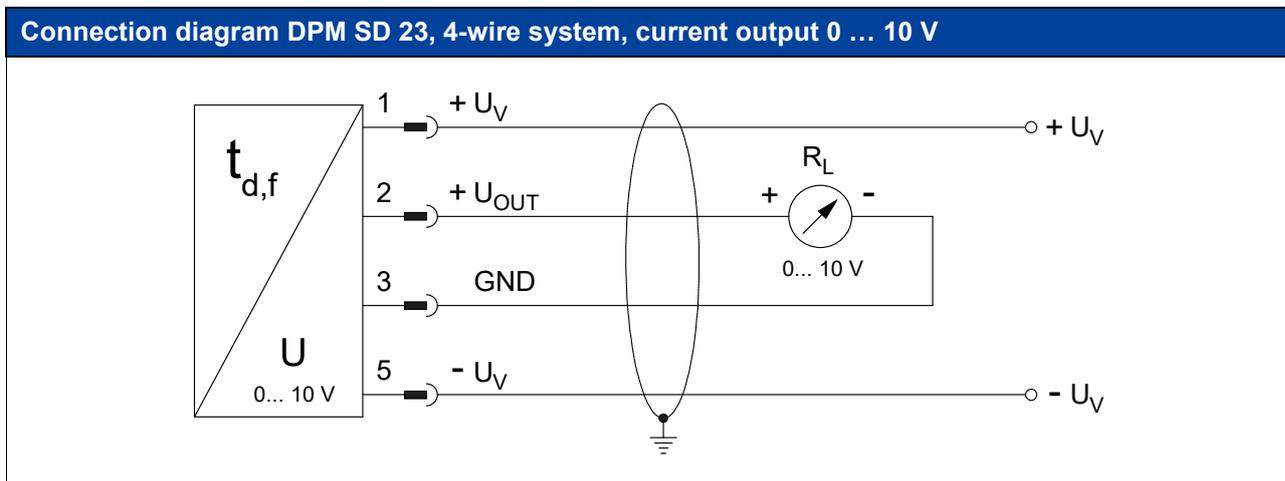

Notes:

The analogue current output 0 ... 10 V has no potential isolation to the power supply.

As the **METPOINT® DPM SD23** pressure dew point transmitters are supplied ex works with the current output 4 ... 20 mA, it is necessary to configure the voltage output 0 ... 10 V via the **PRODCON software**. The scaling of the voltage output is also adjusted via the PRODCON software, unless the factory settings will be used. The following scaling was configured in the factory:

$$0 \text{ V} = - 60 \text{ }^\circ\text{C}_{td} (-76 \text{ }^\circ\text{F}_{td})$$

$$10 \text{ V} = + 30 \text{ }^\circ\text{C}_{td} (+86 \text{ }^\circ\text{F}_{td})$$

The output of the current signal takes place at PIN-5 of the 8-pole M12 connector. The signal output is implemented as an **active power source** against the analogue reference potential (PIN-3).

Prior to the installation and start-up, the load resistance must be observed. It must not underrun a value of 10 kΩ. The calibration of the voltage output applies at 10 kΩ.

$$R_L \geq 10 \text{ k}\Omega$$

For the connection to superordinate control systems, an isolation amplifier may be required in order to avoid earth-coupling. In this respect, please contact the manufacturer of the superordinate control system regarding the possible specifications.


It is recommended to use a shielded cable for the installation. Shielding is implemented via the shield ring of the connector. The preconditions are that the respective connector is made of metal and that the shield has the shape of a braid. The shielding should be earthed at one end.

Electrical installation

11.3 Connection DPM SD23, bidirectional bus system RS485

Pin	Function	Description	Conductor colouring
PIN-1	+U _V	Positive (+) connection of the supply voltage	Brown
PIN-7	Bus A (+)	Non-inverted signal (+) of the RS485 interface	White
PIN-8	Bus B (-)	Inverted signal (-) of the RS485 interface	Black
PIN-5	- U _V	Negative (-) connection of the supply voltage	Blue

Connection diagram DPM SD23, bidirectional bus system RS485

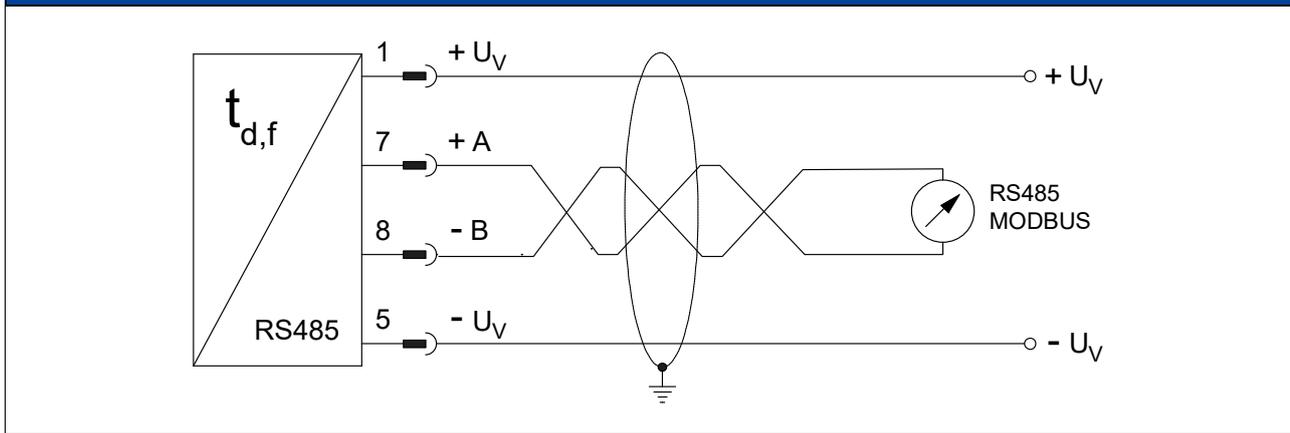

Notes:

The digital interface is always active and can be used in addition to the analogue output.

The bus connection is implemented via PIN-7 = RS485_Bus A (+) and PIN-8 = RS485_Bus B (-).

The two bus lines must not be interchanged because the communication will be disturbed for all participants on the bus. The bus termination at both ends of the network is also important. The correct termination of the bus connection at both ends of the cable must be ensured. **The terminal resistance at both line ends should be activated in order to avoid reflections during the signal transmission.** The 120 Ω bus termination is integrated into the pressure dew point transmitter and energised (it can be energised or deactivated via the PRODCON software, if required).

It is recommended to use only shielded, twisted-pair leads. Shielding is implemented via the shield ring of the connector. The preconditions are that the respective connector is made of metal and that the shield has the shape of a braid. The shielding must be earthed at one end.

Several BEKO devices can be operated on the same bus. In this case, the devices need to be configured to different bus addresses prior to the connection via the PRODCON software. The communication is effected in half-duplex operation.

The **METPOINT® DPM SD23** pressure dew point transmitter meets the specifications:

1. MODBUS APPLICATION PROTOCOL SPECIFICATION V.1.1b3
2. MODBUS over serial line specification and implementation guide V1.02

For detailed information regarding the RS485 interface, please refer to the enclosed product documentation.

The METPOINT® DPM SD23 is supplied ex works with the following Modbus configuration:

Bus address:	01
Terminal resistance 120 Ω	active
Baud rate:	38400

Register	Parameter	Reg. address	Reg. format	Unit	Scaling
Va	Temperature	1216	[HR] R4	°C	No scaling
Vb	Rel. humidity	1152	[HR] R4	% rH	No scaling
Vc	Dew/Freezing point	1536	[HR] R4	°C t _d	No scaling
Vd	Dew point	1472	[HR] R4	°C t _d	No scaling
Ve	Temperature	2944	[HR] R4	°F	No scaling
Vf	Dew/Freezing point	3008	[HR] R4	°F t _d	No scaling

Maintenance and calibration

12 Maintenance and calibration

The perfect and safe functioning of the components requires calibration or adjustment at regular intervals.

The METPOINT® DPM SD23 should be calibrated annually by the manufacturer, and re-adjusted, if required.



Danger!
Compressed air!

Risk of serious injury or death through contact with quickly or suddenly escaping compressed air or through bursting and/or unsecured plant components.

Measures:

- **Only carry out installation works when the system is pressureless and deactivated.**
- Only use pressure-resistant installation material.
- Make sure that no persons or objects can be hit by condensate or emerging compressed air.
- Check the tightness subsequent to maintenance measures.



Warning!
Risk of injury in the event of insufficient qualifications!

Improper use can lead to significant personal injury and material damage.

All of the activities described in these operating instructions must only be carried out by qualified personnel with the qualifications described hereinafter.

Qualified personnel

Due to the specific training and knowledge concerning the measuring and control technology, and due to their experience and knowledge of the country-specific provisions, standards in force and directives, qualified personnel are capable of carrying out the described work and of independently identifying the possible risks.

Special employment conditions require further corresponding knowledge, e.g. regarding aggressive media.



Warning!
Risk of injury through temperature!



Risk of injury through the contact with very high or low temperatures.

Measures:

- Prior to undertaking maintenance measures, carry out a temperature compensation or wear protective gloves.



Caution!
Damage possible!

Damage and malfunctions at the METPOINT® DPM SD23 pressure dew point transmitter may occur through incorrect maintenance and calibration or when maintenance and calibration measures are not undertaken at regular intervals.

These can lead to incorrect measuring results and to misinterpretations.

Measures:

- Carry out regular inspections and checks in accordance with the Pressure Equipment Directive (PED).

12.1 Cleaning/decontamination

Cleaning of the METPOINT® DPM SD23 must be undertaken using a slightly damp (not wet) cotton cloth or one-way wipe, and mild, commercially available cleaner/soap.

For decontamination, spray the cleaner on an unused cotton cloth or one-way wipe and wipe the component comprehensively. Effectuate subsequent drying using a clean cloth or via air drying.

In addition, the local hygiene provisions need to be observed.



Danger!

Compressed air/reaction products!



Risk of serious injury or death through contact with quickly or suddenly escaping compressed air and through toxic, flammable, or potentially explosive reaction products.

Measures:

- **Only carry out cleaning measures when the system is pressureless.**
- Purge the respective plant component or pressure dew point transmitter prior to starting the maintenance works.
- Immediately clean the removed components from measuring media residues.



Warning!

Damage possible!



A too high degree of humidity and hard and pointed objects cause damage to the pressure dew point transmitter and to the integrated electronic components.

Measures






- Never clean with a soaked cloth.
- Do not use pointed or hard objects for cleaning.

Scope of delivery

13 Scope of delivery

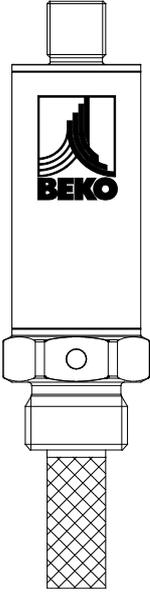Illustration	Description
	1 x METPOINT® DPM SD23 pressure dew point transmitter
	1x M12 plug, straight
	1 x stainless-steel seal
Without illustration	1 x factory calibration record

14 Accessories

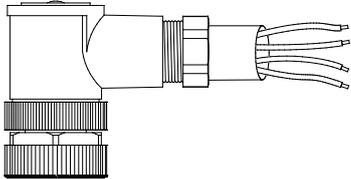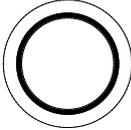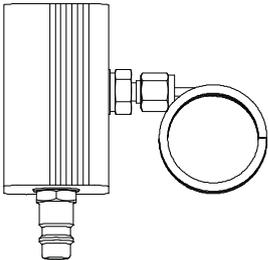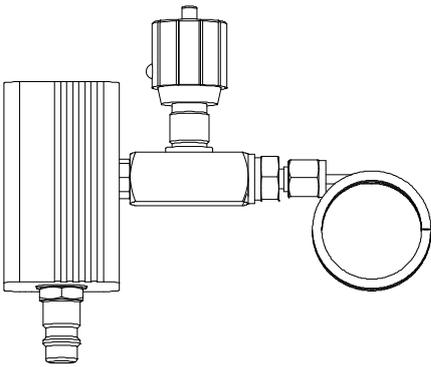Description	Order no.
<p>M12 connector, angle (incl. 5 m cable, pre-assembled)</p> 	<p>4025253</p>
<p>1 x stainless-steel seal</p> 	<p>4025004</p>
<p>Connecting cable 4 x 0.34 mm² (AWG 22)</p> 	<p>Upon request</p>
<p>Measuring chamber</p> 	<p>Upon request</p>
<p>Measuring chamber with a purge-air controller</p> 	<p>Upon request</p>

Dismantling and disposal

15 Dismantling and disposal

When dismantling the DPM SD23 pressure dew point transmitter, all related parts and operating media must be disposed of separately.

Waste code: **20 01 36**
Used electrical and electronic devices with the exception of those which come under 20 01 21, 20 01 23, and 20 01 35.



Warning!

Danger for persons and the environment!

The device must be disposed of in accordance with the European RoHS-2 2011/65/EU Directive.

Old appliances must not be disposed of with normal household waste!

Depending on the used medium, residues on the device may represent a danger to the operator or the environment. Therefore, undertake suitable protective measures and dispose of the device properly.

Measures:

- Immediately clean the removed components from measured media residues when suitable protective measures cannot be undertaken.



Warning!

Risk of injury!



Risk of injury through the contact with very high or low temperatures.

Measures:

- Prior to the removal of the DPM SD23 pressure dew point transmitter, wait for temperature compensation or wear protective gloves.

16 Troubleshooting and fault removal

Symptoms	Possible reasons
Signal current ≥ 21.0 mA	Sensor error / system error
Signal current ≤ 3.6 mA	Sensor error / system error
Signal current < 4.0 to 3.8 mA	Falling below the measuring range
Signal current > 20.0 to 20.5 mA	Exceeding the measuring range
There is no signal. Signal current = 0 mA	Break of the signal line

17 Declaration of conformity

BEKO TECHNOLOGIES GMBH
 Im Taubental 7
 41468 Neuss, GERMANY
 Tel: +49 2131 988-0
 www.beko-technologies.com



EU-Konformitätserklärung

Wir erklären hiermit, dass die nachfolgend bezeichneten Produkte den Anforderungen der einschlägigen Richtlinien und technischen Normen entsprechen. Diese Erklärung bezieht sich nur auf die Produkte in dem Zustand, in dem sie von uns in Verkehr gebracht wurden. Nicht vom Hersteller angebrachte Teile und/oder nachträglich vorgenommene Eingriffe bleiben unberücksichtigt.

Produktbezeichnung:	METPOINT® DPM SD23
Typ:	4024283
Messbereich:	-60 ... +30°Ctd (Frostpunkt / Taupunkt)
Versorgungsspannung:	14 ... 30 VDC
IP-Schutzart	IP65
Max. zulässiger Betriebsdruck:	50 bar
Min. / Max. Betriebstemperatur:	-30°C / +70°C
Datenblatt:	DB_DPM-809-1013-FP-A
Produktbeschreibung und Funktion:	Drucktaupunkt-Transmitter

Druckgeräte-Richtlinie 2014/68/EG

Die Produkte fallen in keine Druckgerätekategorie und sind gemäß Artikel 4 Absatz 3 in Übereinstimmung mit der in den Mitgliedstaaten geltenden guten Ingenieurspraxis ausgelegt und werden dieser entsprechend hergestellt.

EMV-Richtlinie 2014/30/EU

Angewandte harmonisierte Normen: EN 61326-1:2013, EN 61326-2-3:2013

ROHS II-Richtlinie 2011/65/EU

Die Vorschriften der Richtlinie 2011/65/EU zur Beschränkung der Verwendung bestimmter gefährlicher Stoffe in Elektro- und Elektronikgeräten werden erfüllt.

Die Produkte sind mit dem abgebildeten Zeichen gekennzeichnet:



Die alleinige Verantwortung für die Ausstellung dieser Konformitätserklärung trägt der Hersteller.

Neuss, 17.06.2016

Unterzeichnet für und im Namen von:

BEKO TECHNOLOGIES GMBH

i.V. Christian Riedel

Leiter Qualitätsmanagement International

CE_DPMSD23-822-0416-FP-B

Declaration of conformity

BEKO TECHNOLOGIES GMBH
41468 Neuss, GERMANY
Tel.: +49 (0)2131 988 0
www.beko-technologies.com



EU Declaration of Conformity

We hereby declare that the products indicated hereafter comply with the stipulations of the relevant directives and technical standards. This declaration only refers to products in the condition in which they have been placed into circulation. Parts which have not been installed by the manufacturer and/or modifications which have been implemented subsequently remain unconsidered.

Product designation:	METPOINT® DPM SD23
Type:	4024283
Measuring range	-60 ... +30°Ctd (frost point / dew point)
Supply voltage:	14 - 30 VAC
Degree of protection	IP65
Max. permissible operating pressure:	50 bar
Min./max. operating temperature:	-30°C / +70°C
Data sheet:	DB_DPM-809-1013-FP-A
Product description and function:	Pressure dew point transmitter

Pressure Equipment Directive 2014/68/EC

This product does not fall into the scope of the pressure devices categories, and has been designed and manufactured according to sound engineering practice, applicable in the EU member states, in compliance with article 4, paragraph 3.

EMC Directive 2014/30/EU

Applied harmonized standards: EN 61326-1:2013, EN 61326-2-3:2013

RoHS II Directive 2011/65/EU

The products meet the requirements laid down in European Directive 2011/65/EU concerning the restriction of the use of certain hazardous substances in electrical and electronic devices.

The products bear the CE Mark:



This Declaration of Conformity has been issued by the manufacturer.

Neuss, 17/06/2016

Signed:
BEKO TECHNOLOGIES GMBH
p.p. Christian Riedel
Head of International Quality Management

Archiving: DPMSD23-822-1014-FP-A

Declaration of conformity

18 Index

- Accessories 25
- Check 22
- Components 24
- Compressed air 23
- Connection SD23, 0 ... 10 V 19
- Connection SD23, 4 ... 20 mA 18
- Connection SD23, RS485 20
- Danger compressed air** 5, 15, 17, 22, 26
- Declaration of conformity 27
- Description SD23 14
- Dimension drawing and connections SD23 14
- Dimension drawings 12
- Dimensions 12, 14
- Dimensions SD23 12
- Electrical data 11
- Electrical installation 17
- Exclusion from the field of application 7
- Fault 26
- Fault clearance 26
- Fault removal 26
- Function 14
- Installation and operating instructions 4
- Maintenance 22
- Maintenance works** 15, 23
- Malfunction 26
- Pictograms 4
- Scope of delivery 24
- Symbols 4
- Technical data 9
- Technical data SD23 9
- Troubleshooting 26

BEKO TECHNOLOGIES GmbH

Im Taubental 7
 D - 41468 Neuss
 Tel. +49 2131 988 0
 Fax +49 2131 988 900
 info@beko-technologies.com
 service-eu@beko-technologies.com

DE**BEKO TECHNOLOGIES LTD.**

Unit 11-12 Moons Park
 Burnt Meadow Road
 North Moons Moat
 Redditch, Worcs, B98 9PA
 Tel. +44 1527 575 778
 info@beko-technologies.co.uk

GB**BEKO TECHNOLOGIES S.à.r.l.**

Zone Industrielle
 1 Rue des Frères Rémy
 F - 57200 Sarreguemines
 Tél. +33 387 283 800
 info@beko-technologies.fr
 service@beko-technologies.fr

FR**BEKO TECHNOLOGIES B.V.**

Veenen 12
 NL - 4703 RB Roosendaal
 Tel. +31 165 320 300
 benelux@beko-technologies.com
 service-bnl@beko-technologies.com

NL**BEKO TECHNOLOGIES (Shanghai) Co. Ltd.**

Rm.715 Building C, VANTONE Center
 No.333 Suhong Rd.Minhang District
 201106 Shanghai
 Tel. +86 (21) 50815885
 info.cn@beko-technologies.cn
 service1@beko.cn

CN**BEKO TECHNOLOGIES s.r.o.**

Na Pankraci 58
 CZ - 140 00 Praha 4
 Tel. +420 24 14 14 717 /
 +420 24 14 09 333
 info@beko-technologies.cz

CZ**BEKO Tecnológica España S.L.**

Torruella i Urpina 37-42, nave 6
 E - 08758 Cervelló
 Tel. +34 93 632 76 68
 Mobil +34 610 780 639
 info.es@beko-technologies.es

ES**BEKO TECHNOLOGIES LIMITED**

Room 2608B, Skyline Tower,
 No. 39 Wang Kwong Road
 Kwoloon Bay Kwoloon, Hong Kong
 Tel. +852 2321 0192
 Raymond.Low@beko-technologies.com

HK**BEKO TECHNOLOGIES INDIA Pvt. Ltd.**

Plot No.43/1 CIEEP Gandhi Nagar
 Balanagar Hyderabad
 IN - 500 037
 Tel. +91 40 23080275 /
 +91 40 23081107
 Madhusudan.Masur@bekoindia.com
 service@bekoindia.com

IN**BEKO TECHNOLOGIES S.r.l**

Via Peano 86/88
 I - 10040 Leini (TO)
 Tel. +39 011 4500 576
 Fax +39 0114 500 578
 info.it@beko-technologies.com
 service.it@beko-technologies.com

IT**BEKO TECHNOLOGIES K.K**

KEIHIN THINK Building 8 Floor
 1-1 Minamiwatarida-machi
 Kawasaki-ku, Kawasaki-shi
 JP - 210-0855
 Tel. +81 44 328 76 01
 info@beko-technologies.jp

JP**BEKO TECHNOLOGIES Sp. z o.o.**

ul. Pańska 73
 PL - 00-834 Warszawa
 Tel. +48 22 314 75 40
 info.pl@beko-technologies.pl

PL**BEKO TECHNOLOGIES S. de R.L. de C.**

BEKO Technologies, S de R.L. de C.V.
 Blvd. Vito Alessio Robles 4602 Bodega 10
 Zona Industrial
 Saltillo, Coahuila, 25107
 Mexico
 Tel. +52(844) 218-1979
 informacion@beko-technologies.com

MX**BEKO TECHNOLOGIES CORP.**

900 Great Southwest Pkwy SW
 US - Atlanta, GA 30336
 Tel. +1 404 924-6900
 Fax +1 (404) 629-6666
 beko@bekousa.com

US

Original instructions in German.

metpoint_sd23_manual_en_10-055_1501_v02.doc